



STRIP WIRES TO APPROXIMATELY
5/8" FROM END.

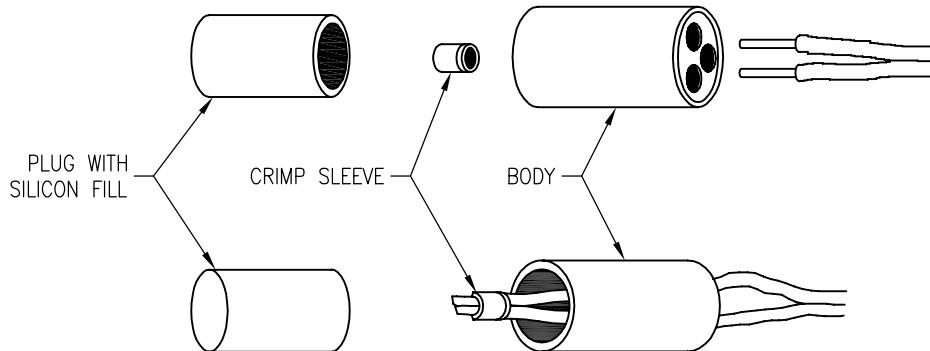

INSERT WIRES THROUGH
HOLES IN BASE OF BODY


TWIST STRIPPED WIRES TOGETHER
AND APPLY CRIMP SLEEVE WITH AN
INDENT TYPE CRIMPING TOOL.



PUSH WIRES BACK INTO BODY.
INSERT PLUG INTO BODY UNTIL
IT SNAPS TIGHT.

NOTES:

1. ONE CONNECTOR WILL HANDLE #10, #12 AND #14 AWG WIRES.
2. WIRE CONNECTOR WILL ACCEPT TWO OR THREE WIRE CONNECTIONS.
3. MANUFACTURED BY SPEARS, MODEL DS-400, OR APPROVED EQUAL.

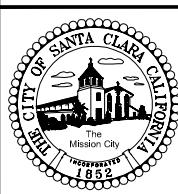

DRAWN BY: M. LEE
CHECKED BY: J. MENDOZA
APPROVED BY: G. GOMEZ
DATE: DECEMBER 2002

LOW VOLTAGE IRRIGATION
WIRE CONNECTION

LS-22

CITY OF SANTA CLARA

PAGE: 67